




# Installation instructions

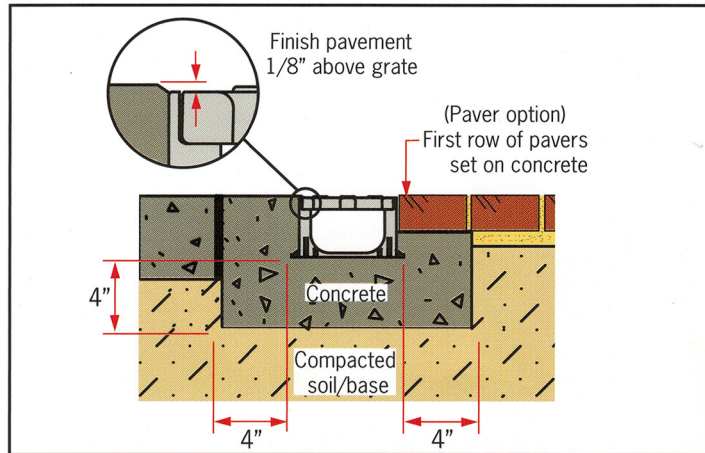


For driveway applications, trench **MUST** be surrounded by 4" of concrete

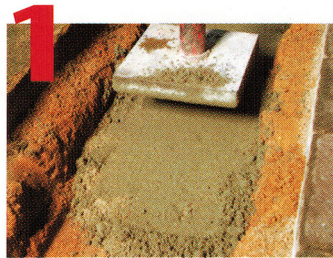

Excavate area to accommodate trench drain and 4" concrete surround, compact base.

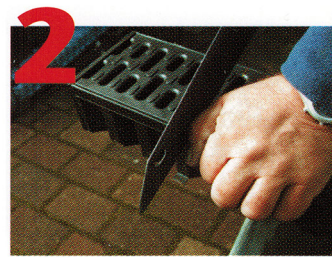

Cut channels to fit required length (if necessary)

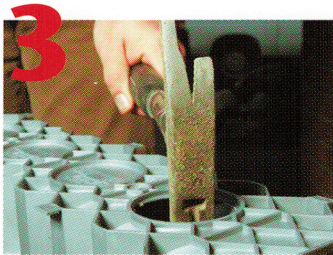


Knockout channel base for outlet at required position



Push-fit outlet adapter into bottom of channel, lay outlet channel first and connect 3" or 4" SDR pipe or 4" schedule 40.



Lay 4" deep concrete bed. Lay channels working away from outlet, channels slide-fit together. Make sure to keep grate top inside trench while filling to avoid squeezing trench

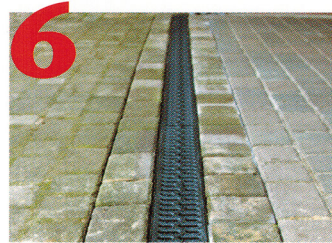

Finish pavement/pavers must be 1/8" higher than the grate.

\*For pedestrian only applications, trench drain can be set directly on well compact soil.